

DSM - DAPNIA

DIRECTION DES SCIENCES DE LA MATIERE
 DEPARTEMENT D'ASTROPHYSIQUE, DE PHYSIQUE DES PARTICULES
 DE PHYSIQUE NUCLÉAIRE ET DE L'INSTRUMENTATION ASSOCIÉE
 SERVICE D'ELECTRONIQUE, DES DETECTEURS ET D'INFORMATIQUE


ERIC DELAGNES
 delagne@hep.saclay.cea.fr

SERVICE D' ELECTRONIQUE

DOMINIQUE BRETON
 breton@lal.in2p3.fr

Date : 11/09/2007	Object : Documentation of the MATAcq14 board.
By : E. DELAGNES + D. BRETON	V/Ref. : 1.2

N O T E: Documentation of the MATAcq14 board.
 Web site: matacq.free.fr

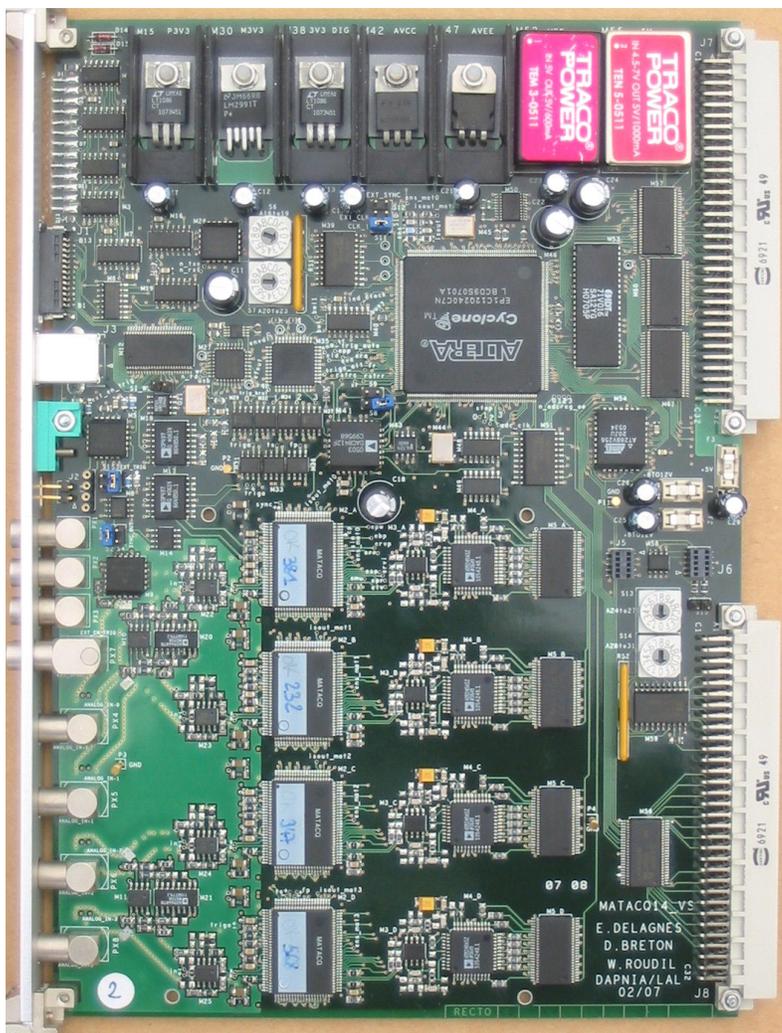

EVOLUTIONS OF THE DOCUMENT.

Rev 1.0 : first version developed from the version 1.8 of the MATACQ14 board documentation.

Rev 1.1 :

- some precisions at various locations (II.1.a, III.3, IV.2.b).

Rev 1.2 :

- IV.3.b : accessing the EEPROM. Trigger rate monitor. New straps. A few corrections.

Documentation of the MATACQ32 board : INDEX

N O T E: Documentation of the MATACQ14 board.	1
Web site: maticq.free.fr	1
I. Description of the functionalities of the MATACQ14 board.	5
I.1. Generalities. Description of the overall functionality.	5
I.2. Sampling frequency.	6
I.3. Input signals, Dynamic range.	6
II. Mode of operation.	6
II.1. Definition of the acquisition window. Trigger modes.	6
II.1.a) Principle, PRETRIG, POSTTRIG.	6
II.1.b) Trigger sources.	7
II.1.c) Trigger edge.	8
II.1.d) TRIGOUT signal.	8
II.1.e) Validation of the trigger by a second subsequent signal.	9
II.2. Dead time at the start of the acquisition; Pretrig.	10
II.3. Standard acquisition sequence.	10
II.4. Correction of data.	11
II.4.a) Correction of the pedestals.	12
II.4.b) Temporal corrections.	12
III. Synchronizations, calibrations, monitoring.	14
III.1. Synchronization between the channels.	14
III.1.a) Channels from the same board.	14
III.1.b) Channels situated on different boards.	14
III.2. SYNC_OUT and BUSY signals. Partial reading of the matrices.	15
III.3. Calibrations.	15
III.3.a) Calibration of the interpolator.	15
III.3.b) Calibration of the pedestals.	17
III.3.c) Temporal calibration between different channels.	18
III.4. Trigger rate monitor.	18
Technical description.	18
Technical description.	19
IV.1. Mechanical and electrical standards.	19
IV.1.a) Mechanical standard.	19
IV.1.b) Electrical interfaces.	19
IV.1.c) Summary of front panel signals.	20
IV.1.d) Supplies.	21
IV.1.e) Pinout of the non-standard connectors.	21
IV.1.f) Straps and resistor network sockets.	22
* located under the board.	22
IV.1.g) Implementation of differential inputs.	23
IV.2. Interfaces.	23
IV.2.a) VME interface.	23
IV.2.b) GPIB Interface.	24
IV.2.c) USB Interface.	25
IV.3. Dealing with the memories.	25
IV.3.a) Reading of the data in the RAM; mapping.	25
IV.3.b) Accessing the EEPROM.	26
IV.4. List of the sub-addresses.	27
IV.5. Synopsis of the board.	33

IV. Specifications and performances	34
V. Bibliography	35

I. DESCRIPTION OF THE FUNCTIONALITIES OF THE MATAQ14 BOARD.

I.1. Generalities. Description of the overall functionality.

The MATAQ14 board is suited for acquisition of fast analog signals based on the MATAQ (analog matrix) chip [1] developed by collaboration of the CEA/DAPNIA and the l'IN2P3/LAL. This board, in the mechanical format VME double Europe, is compatible with several standards of acquisition (VME A32/D64, A32/D32, A24/D16, GPIB and USB 2.0).

It is an evolution of the 12-bit dynamic range MATAQ board series, and is compatible with the latter at power-up: it thus can be used by default with the same software.

It performs the coding of 4 analog channels of bandwidth tunable up to 300MHz over 14 bits at a sampling frequency (F_e) tunable up to 2GHz and over a depth of 2520 usable points.

This operation is realized in three phases (see Fig 1):

- **Acquisition** :
the analog signal is continuously sampled at the frequency F_e in a circular analog memory. The arrival of a trigger signal initiates the stopping phase of the sampling (II.1.a). At the end of this phase, the state of the memory is set: it then contains the last 2560 points sampled (out of which 2500 are valid).
- **Numerization and storage** :
after a stopping order of the acquisition, the samples stored under analog form in the MATAQ chips are rapidly ($650\mu s$) re-read and coded into digital data over 14 bits, then stored in a digital memory buffer. The acquisition is informed of the end of the coding phase either by scrutation of an internal register, or by an interruption.
- **Reading** :
the memory buffer can then be re-read by the acquisition system. For an acquisition system of VME A24-D16 standard, the latter operation lasts a few ms for the full readout of a 4-channel board, which permits attaining an acquisition frequency of a few hundred Hz for the acquisition of 2500 points per channel. With a high performance A32-D32 system, one should pass 500Hz, and approach the kHz with a performing A32/D64 system.

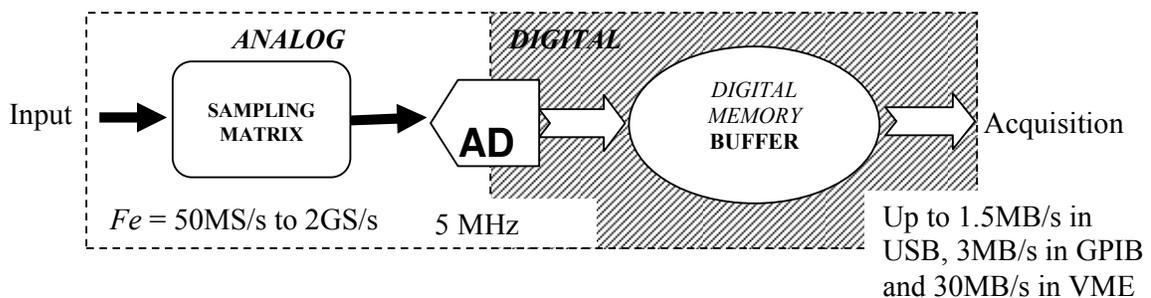


Fig 1 : data flow in the board.

I.2. Sampling frequency.

The MATACQ14 board is sequenced by an oscillator at a frequency of 100MHz. No greater frequency signal exists on the board. This is what explains the low consumption of the system. The sampling at a very high frequency (F_e) in the MATACQ chip is in fact realized by virtual multiplication of frequency inside the chip by a factor up to 20.

The MATACQ chip functions with a pilot frequency of 50MHz or 100MHz programmable on the board by software, which corresponds to a sampling frequency $F_e (= 20 \cdot F_p)$ of 1 or 2 GHz.

The EXT_CLK input may possibly be used to inject a very clean external pilot clock comprised between 50MHz and 100MHz. **Caution:** the MATACQ chip cannot work properly with a pilot frequency F_p lower than 50MHz.

I.3. Input signals, Dynamic range.

The MATACQ14 board integrates 4 analog channels. Depending on the different versions, the inputs of these channels are connected through simple LEMO plugs (IN0 to IN3), double (IN0+/- to IN3+/-), or SMA plugs (IN0 to IN3).

The inputs are by default unipolar and terminated on 50 Ohms. However, the input levels of the board can be very easily modified (through displacing a few resistors and mounting new ones) in such a way as to permit the input in differential mode (from which the possibility of mounting double LEMO plugs). For this purpose, free CMS-805 resistor footprints are indeed implemented on the MATACQ14 board (see IV.1.g).

The analog to digital conversion is made on 12 bits with a maximum dynamic range of 2V, or an LSB of $125\mu\text{V}$. This range is centered on 0V (+/- 1V). However, free CMS-805 footprints are implemented on the MATACQ14 board for shifting the dynamic range in the interval +/- 0.5V in order to be able to optimize the system for unipolar signals (see IV.1.h).

The measured noise referred to input is less than $175\mu\text{V}$ RMS, and the integral non-linearity remains below 1 per 1000 over the whole dynamic range.

II. MODE OF OPERATION.

II.1. Definition of the acquisition window. Trigger modes.

II.1.a) Principle, PRETRIG, POSTTRIG.

During the acquisition, the analog signal is continuously sampled in the analog memory which is comparable to a circular buffer with a depth of 2560 points (time depth = $2560/F_e$). The stopping of sampling is initiated by the arrival of a trigger signal T_a (*asynchronous trigger*) which is common to all the channels of a board. This signal is only authorized to be produced following a programmable delay named *PRETRIG* after the triggering of the acquisition sequence.

The effective stopping of the sampling will occur following a pre-defined number (named *POSTTRIG*) of clock periods (50MHz or 100MHz) after the trigger (cf Fig 2).

The *POSTTRIG*, programmable by the user, permits defining and displacing the position of the trigger signal in the acquisition window. It is adjustable in the $1/F_p$ to $65535/F_p$ range by steps

of $1/F_p$ ($= 20\text{ns}$ or 10ns), to which a fixed extra offset of $3/F_p$ has to be added. This is illustrated in Fig 3a.

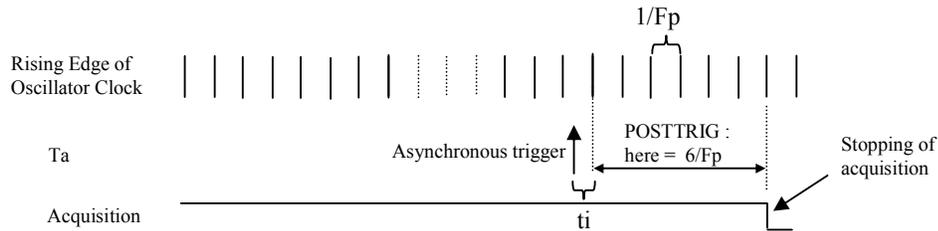


Fig 2 : chronogram of the stopping of the acquisition.

In the example illustrated by Fig2, the total POSTTRIG is fixed at $6/F_p$ ($3/F_p$ programmed in the register + $3/F_p$ extra offset). The acquisition will be stopped $6/F_p + t_i$ after the arrival of the trigger signal (t_i corresponds to the time measured by the vernier between the T_a and the next rising edge of the clock – see II.4.b). The analog memory will then contain the 2560 last recorded samples (of which only the first 2520 will be exploited).



Fig 3a : centering of the Trigger in the acquisition window for two POSTTRIG cases.

Thus, a POSTTRIG value close to 64 assures the centering of the trigger in the middle of the acquisition window. For the values of $\text{POSTTRIG} > 127$, the trigger position no longer appears in the acquisition window.

II.1.b) Trigger sources.

There exist four possible sources for the trigger signal T_a . They are selectable by the user (see IV.4) :

- **Trigger on signal** : this is the result of the logic « OR » of the discriminators on the analog signals of one or several channels of the board by choice of the user. The individual thresholds of the discriminators are programmable by steps of 0.5mV (12-bit DACs) over a range of $\pm 1\text{V}$ (which corresponds to the integrality of the usable input range of the board). The user can also define the type of discrimination (signal crossing the threshold upwards or downwards) via the choice of the trigger edge.
- **External trigger** : external trigger signal entering on a LEMO plug (EXT_TRIG signal at the NIM level). This signal can be either used as any other trigger source with choice of its edge, or exploited directly as an asynchronous trigger (rising edge only) in cases where one uses discriminators from several boards in order to produce at the exterior of the boards (via their output TRIG_OUT) a trigger which will be sent back to them in a

II.1.e) Validation of the trigger by a second subsequent signal.

In the case where one would like to validate the data stored in the MATAcq chips before their transfer towards the RAM, it is possible to make use of the *EXT_EN_TRIG* input to introduce therethrough a validation signal (see figure 3c). This is particularly useful if the system produces such a signal with a delay greater than the maximum sampling depth ($2560/F_p$ i-e $1.25\mu\text{s}$ at 2GS/s and $2.5\mu\text{s}$ at 1GS/s) and smaller than the transfer time towards the RAM ($675\mu\text{s}$). This can thus permit a big decrease of the potential dead-time linked to the readout. In this case, the usual use of the *EXT_EN_TRIG* signal (which permits inhibiting the trigger as described on figure 3b) is inhibited.

In order to perform the validation, a programmable 8-bit latency counter (called *POST_STOP_LATENCY*) with steps of $2.5\mu\text{s}$ is started at the end of the *POSTTRIG*, and if the external validation signal hasn't arrived before the end of that delay, the Matacq chips switch back into the analog input signal writing mode thus waiting for the next trigger. If on the other hand the validation signal did arrive, the waiting data is digitized then stored into the RAM. This mode is validated thanks to the bit 5 of the *TRIGGER_TYPE* register (see IV.4). Moreover, a second 8-bit register (called *POST_LATENCY_PRETRIG*) with the same steps of $2.5\mu\text{s}$ permits the programming of the time to wait before enabling the trigger again if the validation didn't occur. The minimum time for refilling is of $1.25\mu\text{s}$ at 2GS/s and of $2.5\mu\text{s}$ at 1GS/s. The minimum value in that register is thus 1.

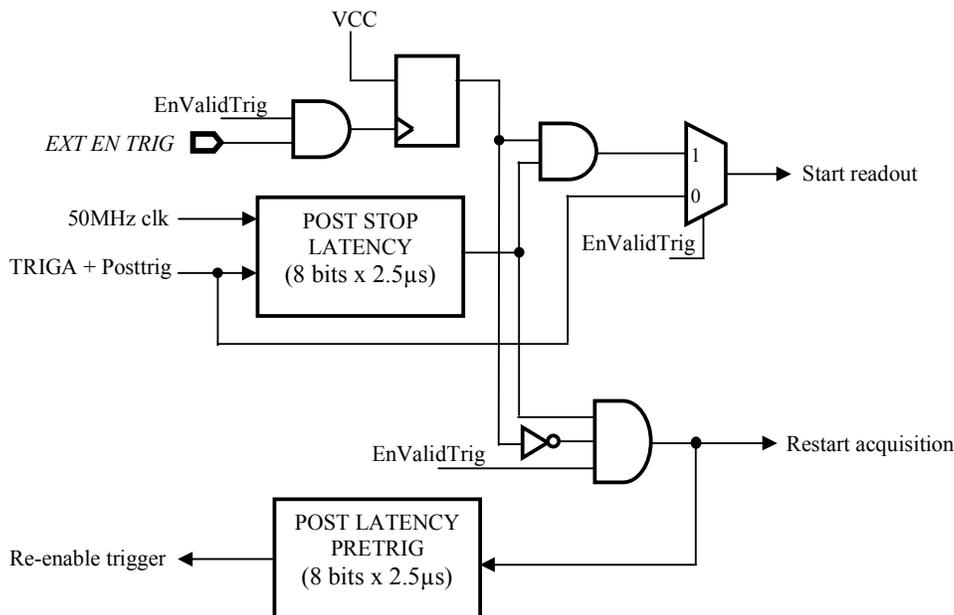


Fig 3c : simplified description of the trigger validation system.

II.2. Dead time at the start of the acquisition; Pretrig.

The frequency of the clock present on the board is relatively low (50MHz or 100MHz). In order to be able to sample at a rate equal to or greater than the Giga-sample per second, the MATACQ chips realize a virtual multiplication of frequency. This multiplication requires a servo of which the control loop is interrupted at the time of the data read cycle. At the time of the start of the acquisition, this servo has to get locked again. This implicates a typical waiting of 150 μ s before being able to reach the optimum of the sampling performances.

For this reason, at each restarting of the acquisition, the board must automatically generate a dead time during which the triggers are not accepted.

This dead time is adjustable by the PRETRIG, from 1 to 65535 times the period of the main clock. The minimal recommended PRETRIG values are therefore :

- 7500 (decimal) for a clock frequency of $F_p = 50\text{MHz}$.
- 15000 (decimal) for a clock frequency of $F_p = 100\text{MHz}$.

II.3. Standard acquisition sequence.

Fig 4 shows the standard course of an acquisition :

- The sequence begins with the initialization of the board by a *RESET* order.
- Next, the different parameters which are not used with their default value must be programmed (PRETRIG, POSTTRIG, TRIGGER TYPE, TRIGGER EDGE, MASK, NB OF COL TO READ, FP FREQUENCY, ...).
- The starting order of the acquisition is next sent.
- The user if necessary sends a software trigger (in the case of an automatic trigger) having taken care to wait at least the time necessary for the PRETRIG.
- The program then waits for a request emitted by the MATACQ14 board when the data are ready to be read. For this, there exist two possibilities illustrated by Fig 5 :
 - Waiting and handling of an interruption (SRQ in GPIB, IRQ1 to 7 in VME, specific format in USB).
 - Regular scanning of the LSB of the interruption register (INTERRUPT h80).

The first solution has the big advantage of being less noisy for the front-end of the board for it does not require any bus access. In both cases, the user should acknowledge the request by writing a 0 in the *INTERRUPT* register, but the latter is anyhow reset by the *START_ACQ* command.

- The user can then partially or wholly read the data stored in the board. This includes :
 - the values of the vernier and of the samples (cf IV.3)
 - the value of TRIG_REC which permits determination of the position of the trigger in the acquisition window (cf II.4.b) and 0)
- The user must correct the data before using it (cf II.4):
 - By subtracting the pedestals (cf II.1.a).
 - By reordering the data (cf II.4.b).

These operations can be executed on-line or off-line according to the context.

II.4. Correction of data.

The raw data extracted from the board must be treated before really being usable. This treatment consists of two operations :

- Correction of the pedestals.
- Reordering and time alignment of the data.

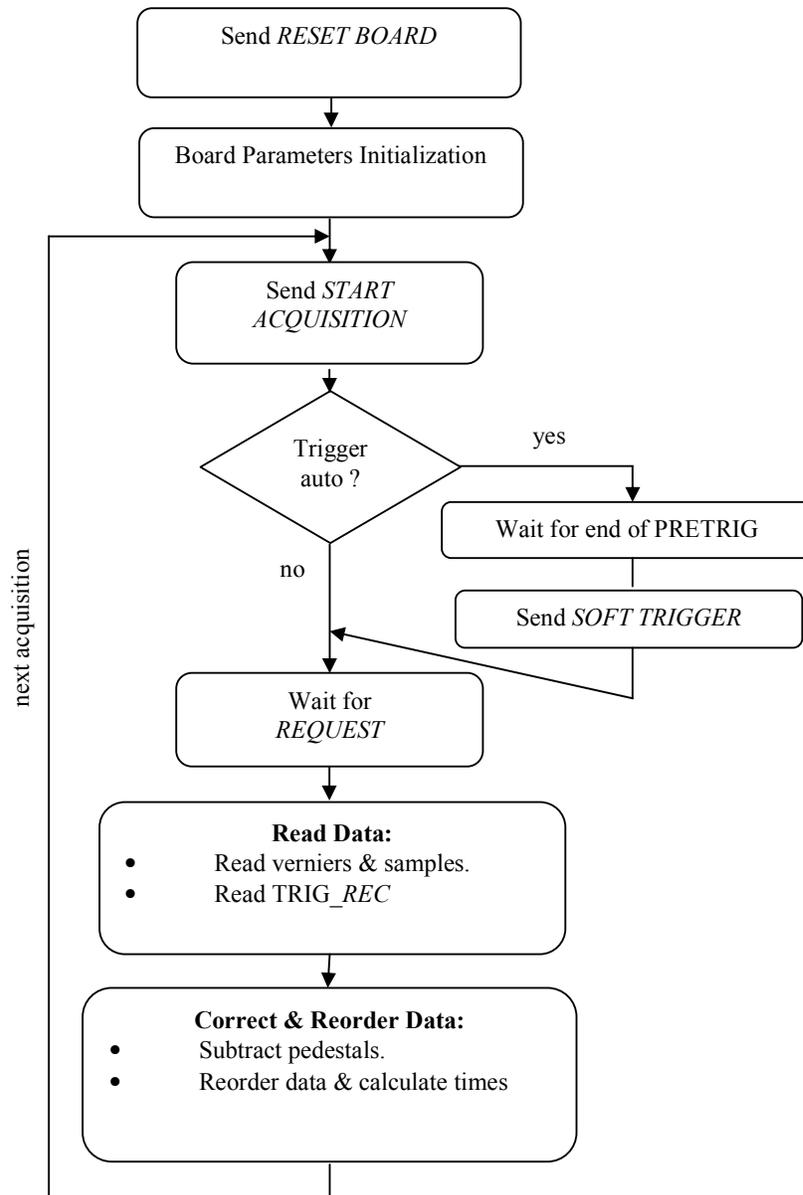


Fig 4 : block diagram of a standard acquisition.

II.4.a) Correction of the pedestals.

The analog memories of the MATAQ chips present by design dispersions of pedestal from cell to cell which can reach several tens of mV. On the other hand, the pedestal of a data cell is extremely reproducible (250 μ V RMS). Due to the structure of the chip, the dispersion of the pedestals presents a principal periodicity of 20 cells, followed by a tiny individual distribution. If not compensated, this dispersion will appear as a noise at the reconstruction of the signal because of the random position of the trigger in the matrix.

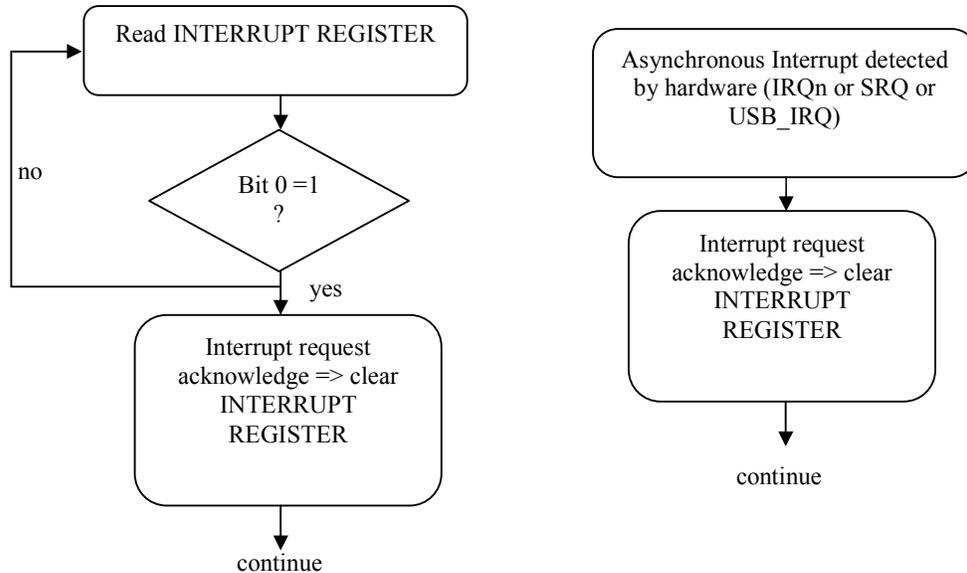


Fig 5 : two possibilities for detection and for treatment of the request : scanning of the interruption register or treatment of the asynchronous interruption.

In order to obtain the nominal noise performances (signal to noise ratio of 81dB), the pedestals, which are stable in time and with temperature, must be removed by the acquisition software individually cell by cell. As discussed above, it is also possible to subtract 128 times a pattern of 20 cells. This makes it possible to store only 20 pedestals, and the loss of the signal over noise ratio remains minor (approximately 1 to 2dB) even though it is not negligible.

Since the pedestal of a cell is linked to its physical location and not to its position in relation to the Trigger, **it is necessary to realize this removal BEFORE reordering the data.**

A method of calibration of the pedestals is demonstrated in section III.3.b).

II.4.b) Temporal corrections.

The signal is sampled in a circular memory. The first operation necessary for the treatment of the data is therefore to « unfold » the circular memory of every channel in order to obtain tables of 2560 temporally ordered data (cf Fig 6). This can be done, by example, by realizing a rotation of :

$$(1) \text{ ROT} = (\text{TRIG_REC} - \text{POSTTRIG}) * 20$$

cells towards the left of the data tables issued from the RAM and formerly sorted channel by channel (see IV.3).

Or, equivalently through a calculation of a new index number for each data :

$$(2) \text{ NEW}_i = (2560 + \text{OLD}_i - \text{END_CELL}) \text{ modulo } 2560$$

where **END_CELL** is the index of the last written cell :

$$\text{END_CELL} = 20 * (\text{POSTTRIG} + \text{TRIG_REC}) \text{ modulo } 128$$

The trigger signal TRIGA (asynchronous trigger) is the absolute reference which serves to temporally realign the data (cf Fig 2). In order to find its position, one uses the information provided by a temporal interpolator (vernier) measuring t_i , time interval separating the arrival of TRIGA from the next rising edge of the Fp clock.

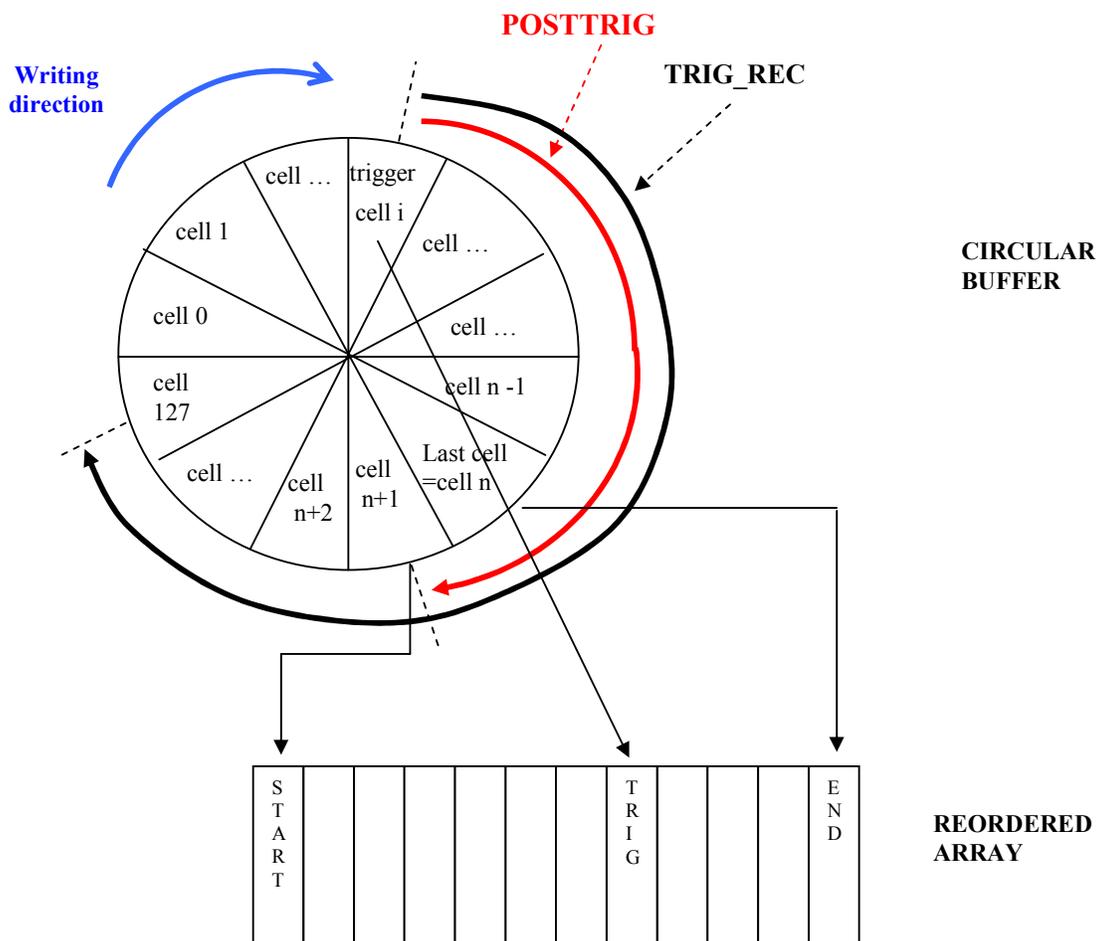


Fig 6 : unfolding of the circular memory

This information associated with the *MINVER* and *MAXVER* calibration constants (cf III.3.a) permits determination of the position of the Trigger and therefore realignment of the data with a typical maximum precision in the region of 50ps RMS. This realignment is unnecessary if

the user simply desires to study the signal shape and in this case, the curve acquired will present a jitter of a period of F_p . The information of the 4 verniers from the same board being redundant in order to realize the temporal adjustment, it is therefore possible:

- to use solely the vernier from the channel 0.
- to use the vernier i for the channel i .
- to calculate the mean of the 4 verniers in order to refine the time precision.

The following formula permits determination of the time of each point of the reordered table, with by convention a time origin (Time = 0) at the arrival of the Trigger.

$$(3) \text{Time}[\text{NEW}_i] = \text{DT0} + \{\text{NEW}_i - 20 * [128 - \text{POSTTRIG} + \text{Correc_Ver}]\} * \text{dT}$$

$$\text{With (4) } \text{Correc_Ver} = (\text{VERNIER} - \text{MINVER}) / (\text{MAXVER} - \text{MINVER})$$

Where :

- dT is the sampling period (500ps or 1ns)
- DT0 is a fixed temporal offset, close to 0, due to signal propagation times in the board (of which the calibration is described in III.1.a)

An alternative but equivalent solution, consists in generating the reordered table through a rotation towards the left of the data of :

$$(1b) \text{ROT} = (\text{TRIG_REC} - \text{POSTTRIG}) * 20 - \text{INT}(\text{Correc_Ver} * 20) \text{ cells}$$

where INT corresponds to rounding off to the nearest whole number.

The trigger is then situated at a time

$$(5) \text{tT} = [\text{Correc_Ver} * 20 - \text{INT}(\text{Correc_Ver} * 20)] * \text{dT}$$

before the cell numbered $20 * (128 - \text{POSTTRIG})$ (plus the offset DT0).

III. SYNCHRONIZATIONS, CALIBRATIONS, MONITORING.

III.1. Synchronization between the channels.

III.1.a) Channels from the same board.

A single trigger signal is used for all of the channels from the same board. The acquisition of these channels will therefore naturally be synchronous, with a typical jitter of only 20ps RMS. The possible temporal offset dT0 , constant, between the channels (principally due to the propagation of the trigger signal on the board, but also to the different lengths of cables at the inputs) will be calibrated once for all. This calibration is executed by sending a same signal on all of the inputs and by looking for the fine position of the trigger on each of the channels.

In the case where the board is triggered on one of the input signals, a fine synchronisation method consists of interpolating by software the crossing of the signal through the trigger threshold on the given channel, this permitting the fine datation of all the measured channels.

III.1.b) Channels situated on different boards.

The synchronization is only possible if the trigger source is common to the different boards. For this, several possibilities can be envisaged :

- to use an external trigger signal common to all of the boards.
- to generate the trigger signal on a fixed board (master) which triggers itself and to send its TRIG_OUT signal output to the external trigger input of the other boards (via a NIM buffer if there is more than one target board).
- to generate the trigger signal on any one of the boards. The TRIG_OUT outputs of all of the boards will then be connected on an external NIM logic then the result will be redistributed in a synchronous fashion to all the boards via their EXT_TRIG input. It is this latter input which will then be programmed as the source of the asynchronous trigger via the bit 4 of the TRIGGER_TYPE register on all the boards.

In all cases a calibration of the temporal offset between the boards is necessary. This calibration, similar to that which is necessary to align the channels from the same board, will be dependent upon the set-up (length of the cables...).

III.2. SYNC OUT and BUSY signals. Partial reading of the matrices.

One of the NIM outputs of the front panel can be configured either as a SYNC_OUT, or as a BUSY respectively with the help of the S4 and S2 straps. SYNC_OUT is a synchronization signal corresponding to the writing in the first cell of the second column of the circular analog memory, and which can be made available on the front panel. For certain applications, this signal can permit triggering of the source analog signals and thus guaranties their fixed position in the memory. Thus, if the temporal occupation of the signals to acquire is low, the user will have the possibility to only re-read the beginning of the depth of the analog memory and to thus limit the dead time linked to the acquisition.

BUSY is a signal destined to inform the external world that the board is not ready to receive a signal (it is either idle, or in the process of transferring data between the MATACQ chips and the RAM, or at the beginning of the acquisition phase). Its transition to 0 indicates then that the board is now ready to record a signal.

III.3. Calibrations.

In order to attain the optimal metrological performance, the MATACQ14 board requires calibrations. These remain valid for several weeks, even several months. The corresponding data can thus be memorized for each acquisition mode. To this end, a 128kBytes EEPROM is available on the board.

III.3.a) Calibration of the interpolator.

The temporal interpolator (vernier) requires a calibration. This operation will be necessary following **all changes** in the sampling frequency. Once performed, its result will be able to get stored and re-used. This calibration, based on a statistical measure, will require the acquisition of several thousand events and can last from one second to a couple of minutes depending on the type of bus and on the software used. It can be done with the inputs connected to any source, but the trigger must be asynchronous in relation to the clock. The result of this calibration will be a “square” histogram, of which the sides correspond to two successive rising edges of Fp. The corresponding value on the left side (*MINVER*) will be the « zero » of the vernier, and the one on the right side (*MAXVER*) will correspond to a vernier of 1/Fp (in other words 10 or 20ns). The intermediate values will next be deduced at the time of the acquisitions by a simple proportional calculation.

The most precise but the longest calibration method consists in putting the system in the mode (TRIGGER_TYPE, PRETRIG, POSTRIG) which will be used for real measurements, and in accumulating a few thousands of events until the edges of the vernier distribution be well drawn. The precision obtained will then be the highest but many minutes might be necessary.

If a lower precision is sufficient, faster modes do exist. The diagram in Fig 7, which follows from that in Fig 4, indeed shows the sequencing of such a calibration, optimized so as to be the fastest possible. In particular :

- The PRETRIG and POSTTRIG are fixed at their minimal value.
- NB_OF_COL_TO_READ has to be set to 1.
- Only the vernier values are read in the RAM. In other words, if NCH channels are read, only the 2*NCH first data are read and only the NCH+1 to 2*NCH words are conserved (cf IV.3).

After a certain number of acquisitions (at least 10000), the boundaries of the vernier *MINVER* and *MAXVER* can be calculated.

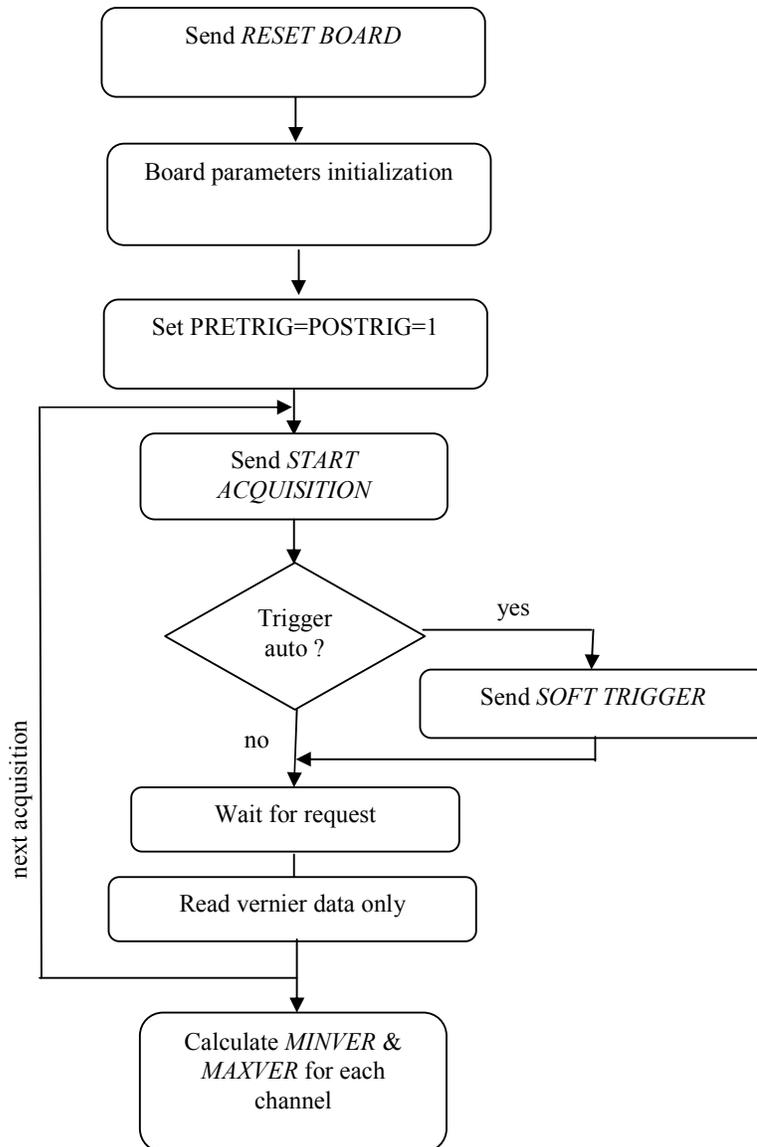


Fig 7 : diagram of the calibration of the verniers.

At first approximation, it is possible to simply use the minimal and maximal values of the vernier for *MAXVER* and *MINVER*. This method is sufficient to obtain temporal resolutions in the region of 70ps RMS.

To get greater precision, one must in order to find the two sides fix a threshold corresponding to half the mean number of ADC counts in the « square » distribution.

To obtain even more precision, it is possible to use more complex methods.

A second, much faster method of calibration is available. For this :

- Charge NB_OF_COL_TO_READ at 0.
- Position the trigger in auto mode.
- Validate the internal random trigger.
- Launch a Start_ACQUISITION.

The RAM is then filled with 65536 vernier values corresponding to 16384 random triggers. For each trigger one finds only 4 values, arranged in the following order :

Channel 3 vernier, channel 2 vernier, channel 1 vernier, channel 0 vernier.

At the end of this calibration, an interruption is generated in order to permit the user to launch a reading. This reading can be realized in block mode, which permits realization of the calibration of the vernier in less than one second if the PRETRIG and POSTRIG are short.

One must note that for this particular method of calibration, the distributions obtained are not necessarily uniform. Nevertheless, the MAXVER and MINVER boundaries are extremely well-defined and therefore perfectly exploitable for corrections. If ever this weren't the case, it would be necessary to run the calibration again but with a different value of PRETRIG.

In order to improve the precision, it is also possible to perform this operation a few times in a row, thus accumulating more data in the histogram.

Our experience showed us that this calibration remains valid several weeks, even several months. The boundaries can nevertheless be updated in real time from the readout event data if their triggering is random relatively to the board pilot clock.

III.3.b) Calibration of the pedestals.

For this, a calibration of the baselines is necessary. This operation will be necessary following **all changes** either in the sampling frequency, or in the bandwidth of the write amplifier (BWL), or in the read modes (FAST READ MODES). It will consist in realizing a mean measurement over a few tens of raw acquisitions of the baselines for all of the cells. During this operation, the inputs must be:

- either disconnected,
- or grounded,
- or, and this is the best solution in term of rejection of parasitics, connected to their source with no signal or with the source not powered.

The trigger must then be either automatic, or external.

The acquisition procedure is the same as for a standard acquisition, but the reading of TRIG_REC can nevertheless be skipped. Of course not the least temporal correction is made on the data. At each acquisition, the table of the means will be computed and finally recorded for an eventual subtraction by software from the unaligned raw data. This calibration operation lasts less than one second.

In cases where the input is connected to unlikely physical signals, it is also possible to realize this calibration without disconnecting the input. However, it will then probably be necessary to increase the number of acquisitions in order to diminish the effect of the induced additional noise.

Our experience shows us that this calibration remains valid several weeks.

III.3.c) Temporal calibration between different channels.


Cf III.1

III.4. Trigger rate monitor.

The dead-time linked to data transfer towards the RAM and to the event readout doesn't allow the user to know about the actual trigger rate of the board in the conditions defined for the trigger. This is the reason why the MATACQ14 board offers the possibility to measure directly this rate thanks to two counters called "trig_count" and "time_count". The first one counts the number of triggers produced in the current defined trigger conditions, whereas the second one counts the number of μs elapsed since the beginning of the counting. The lowest significant bit of the register called "rate_reg" permits the counting. The latter, which functions up to 200MHz, starts upon TRIGA and stops:

- either upon the reading of any of the two counters,
- or when any of them saturates.

It is possible to read the four bytes of the counting registers in block mode and thus to gain a lot of time in USB for instance.

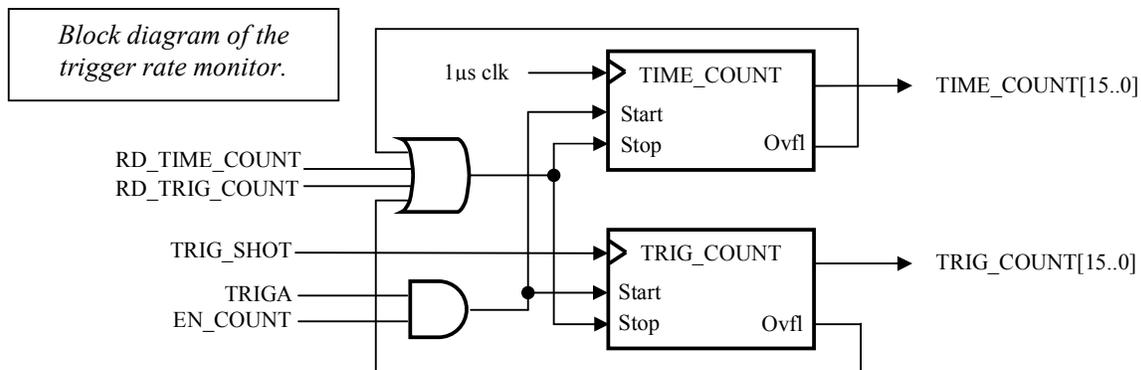

TECHNICAL DESCRIPTION.

IV.1. Mechanical and electrical standards.

IV.1.a) Mechanical standard.

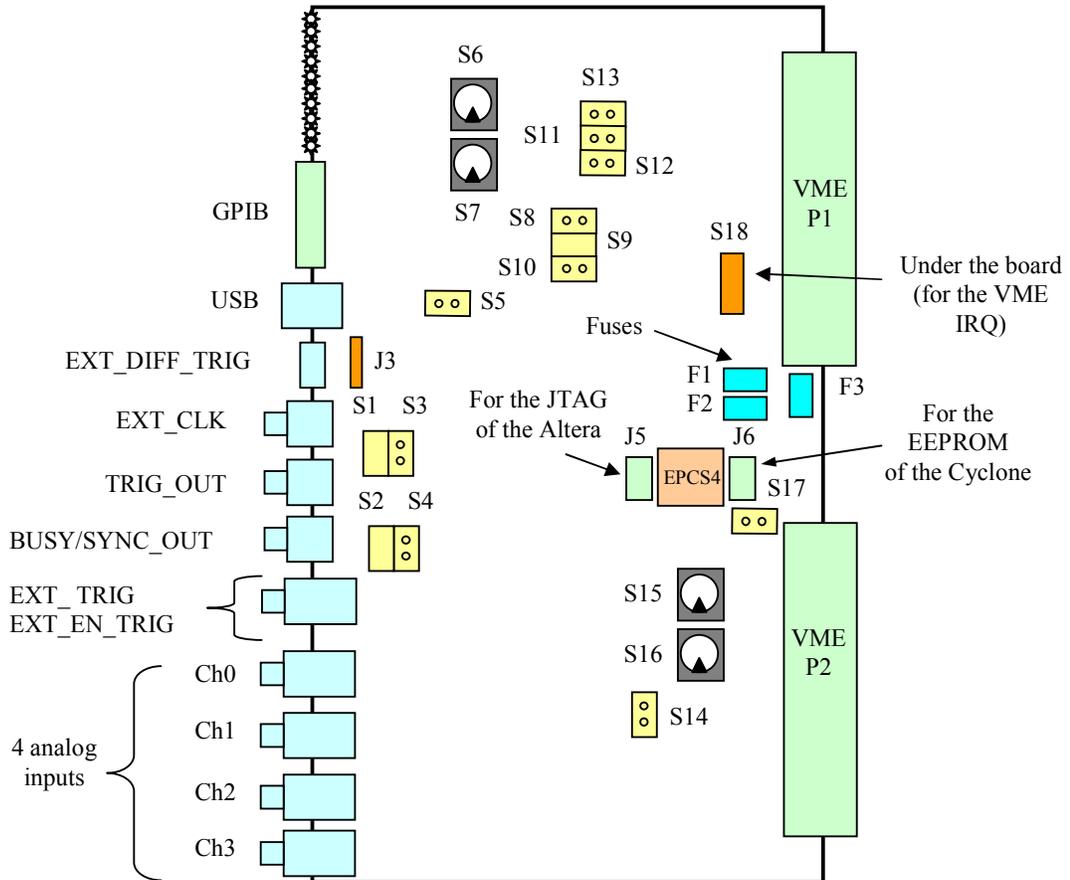


Fig 8 : implementation of the connectors and of the configuration elements on the MATAQ14 board.

The MATAQ14 board is of VME 6U (160x233,3mm²) mechanical format. The two connectors P1 and P2 of the VME crate are usable, both for the supply and the VME dialogue. However, these boards can completely be accessed via the USB and GPIB busses out of a VME crate, or by only using the latter as mechanical and power supply support.

The plugs used for all the digital inputs/outputs are of female LEMO type. The analog inputs are either in simple LEMO, in SMA, or in double LEMO, depending on the version.

IV.1.b) Electrical interfaces.

The MATAQ14 board is compatible with three acquisition busses :

- VME via the P1 connector of the VME (plus the P2 for the A32/D32 mode), 96 pin male connector DIN 41612 .
- GPIB via the two-row connector located on the front panel (26 points male).
- USB 2.0 full speed (12Mb/s) via the B-type USB connector on the front panel.

This board has an address coded over 8 or 16 bits, configurable through a set of hexadecimal rotary switches. For the GPIB and the VME A24/D16, one uses only the two rotary switches S6 and S7. For the VME A32/D32 or A32/D64, one must also use the two rotary switches S13 and S14.

- In GPIB, the address is configurable from 1 to 29 (decimal).
- In VME, the address is configurable from h01 to hFF on the bits 16 to 23 for the A24/D16 mode, and from h0001 to hFFFF on the bits 16 to 31 for the A32/D32 and A32/D64 modes.

The choice of the type of interface is determined by the S9 and S10 jumpers. By default (without jumper), the bus used is the VME. When the jumper S9 is mounted, USB is used. When the jumper S10 is mounted, GPIB is used (if both: a specific reduced VME mode is selected).

IV.1.c) Summary of front panel signals.

The fast logical signals of input “EXT_TRIG” and of output “BUSY/SYNC_OUT” and “TRIG_OUT” of the MATAQ14 board use the NIM standard (-16mA in 50 Ohms i-e -800mV for the logical state « 1 », no current i-e 0V for the logical state « 0 »).

Plug name	Purpose	Connector	I/O	TYPE
IN0+ to IN3 +	Positive Analog Inputs	Half double LEMO or SMA	I	50Ohm terminated
IN0- to IN3 -	<i>Negative Analog Inputs (option)</i>	Half double LEMO	I	50Ohm terminated
EXT_EN_TRIG	External Trigger Enable	Half double LEMO	I	NIM
EXT_TRIG	External Trigger	Half double LEMO	I	NIM
EXT_DIFF_TRIG	External Trigger	Double pin	I	DIFF ECL (adaptable by J3)
EXT_CLK	External clock	LEMO	I	NIM
TRIG_OUT	Trigger Output	LEMO	O	NIM
BUSY/SYNC_OUT	Busy/Synchro Output	LEMO	O	NIM

The front panel leds permit having an image of the current status of the board. The green ones show the presence of the external power supplies, whereas the red ones are linked to the internal signals via monostables which permit the visualization of very short pulses and to digital gates for the continuous levels.

Led name	Type	Function
VME	Monostable + gate	VME access acknowledged by the board.
GPIB	Monostable + gate	GPIB access acknowledged. Remains ON if no EOI is sent by the controller at the end of a writing sequence.
USB	Monostable + gate	USB access acknowledged by the board.
RESET	Monostable + gate	Board reset.
CLOCK	Monostable only	The Altera FPGA is providing the main clock to the board.
BUSY	Monostable + gate	Displays the BUSY signal.
ACQRUNNING	Monostable + gate	Is set ON after a “start acquisition” command. Is set OFF at the end of the POSTTRIG.
TRIG	Monostable + gate	Image of the TRIGA signal.

WR-RAM	Monostable + gate	Write access to the data RAM.
INTERRUPT	Monostable + gate	Displays the INTERRUPT signal which is produced at the end of the acquisition sequence.

IV.1.d) Supplies.

The MATACQ14 board makes use of the standard supplies of the VME: +/-12V and +5V.

It fabricates the -5V for the ECL logics starting from the +5V with the help of a DC-DC converter capable of delivering 600mA.

The 3.3V for the MATACQ chips is regulated from the +5V input. The -3.3V is regulated from a -5V produced in a second DC-DC converter capable of delivering 1A.

The intensities consumed on these different supplies are:

Supply	Consumption	Fuse	Calibre
+12 V	0.35A	F2	1A
-12V	0.15A	F1	1A
+5V	1.5A + X x Y x 1.2A	F3	5A

where X is the rate of acquisition = relation of time spent awaiting the event / total time .

X is worth 1 in the case of infrequent event acquisitions.

X is low (can fall to 1%) in the case of frequent events. In this case indeed, the dead time for readout is dominant in relation to the time spent awaiting the event.

Y depends on the bandwidth mode (cf control registers in 0) :

	BWL0	BWL1	Bandwidth	Y
Full bandwidth mode	0	0	300 MHz	1
Normal mode	1	0	230 MHz	0,6
Normal mode	0	1	230 MHz	0,6
Low power mode	1	1	180 MHz	0,35

IV.1.e) Pinout of the non-standard connectors.

- GPIB Connector (two-row 26-pin male, pitch of 1.28mm, ERNI mini HE10 male B type)

Reference: J2.

1 : D1	2 : D5
3 : D2	4 : D6
5 : D3	6 : D7
7 : D4	8 : D8
9 : EOI	10 : REN
11 : DAV	12 : GND
13 : NRFD	14 : GND
15 : NDAC	16 : GND
17 : IFC	18 : GND
19 : SRQ	20 : GND
21 : ATN	22 : GND
23 : GND	24 : GND
25 : NC	26 : NC

The corresponding female connector can be directly pressed on a 24 wire flat cable equipped at the other extremity with a GPIB standard connector (CENTRONICS 24 points). Up to 18 female connectors can be mounted in parallel on the flat cable (then take care of the bus signal integrity).

- Active Serial connector for the Cyclone ALTERA E2PROM (10-pin two-row female, pitch of 1.28mm)

Reference: J6.

Permits reloading the ALTERA E2PROM (EPCS4) from an Altera file « .pof » in the so-called “active serial” mode.

- JTAG connector for the two ALTERAs (10-pin two-row female, pitch of 1.28mm)

Reference: J5.

Permits accessing the two ALTERAs directly through JTAG and reprogramming them.

IV.1.f) Straps and resistor network sockets.

A certain number of sockets for straps, switches and resistor networks are available on the board. These are their respective roles:


Reference	Role
S1	one utilizes the differential EXT_TRIG differential input (exclusive of S3)
S3	one utilizes the unipolar EXT_TRIG input by Lemo (exclusive of S1)
S2	the BUSY/SYNC_OUT output releases the BUSY signal (exclusive of S4)
S4	the BUSY/SYNC_OUT output releases the SYNC_OUT signal (exclusive of S2)
S5	To pull down the SI_WU input of the FT245B.
S6 and S7	address of the board (see IV.1.b)
S8	normally absent. Permits selecting EXT_SYNC as the main board clock.
S9 and S10	choice of the acquisition data bus (see IV.1.b)
S11	one utilizes the EXT_CLK input for the main clock (exclusive of S11)
S12	one utilizes the 100MHz oscillator for the main clock (exclusive of S10)
S13	sends the EXT_CLK signal towards the EXT_SYNC input of the ALTERA
S14	normally absent. Permits switching the output of the FT245B towards the JTAG bus in order to configure the ALTERAs and the Cyclone's PROM via USB.
S15 and S16	address of the board (see IV.1.b)
S17	normally absent. Prevents the conf_done to rise which then permits not to validate the configuration of the Altera at power-up.
S18*	Choice of the VME IRQ (IRQ1 at the bottom to IRQ7 towards the top).
J3	adaptation for the EXT_DIFF_TRIG input. Place 100 ohms between the pins 1 and 2 and between the pins 3 and 4

* located under the board.

IV.1.g) Implementation of differential inputs.

The input signals are by default unipolar. In order to use differential inputs, one must make use of certain free CMS-805 resistor locations located close to the input amplifiers (LMH6715) and change some others. The equipment map of this zone of the board is presented below. The already present resistors appear in blue, whereas the free locations appear in white.

In order to wire a differential input (with both inputs adapted on 50 ohms), one must first remove the resistors R3, R6 and R8. Then one has to put 84.5 ohms on R2, 0 ohm on R5 (use the former R3), 121 ohms on R55 and 50 ohms on R56. Finally, R9 (750 ohms) has to be replaced by 237 ohms and R10 (30.9 ohms) by 10 ohms.

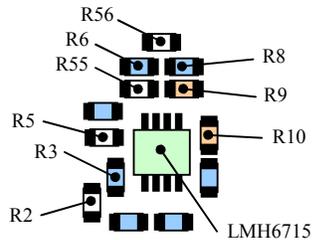

Implementation of the components around the differential amplifier located in the block, bottom left of the MATAcq chip.

IV.2. Interfaces.

IV.2.a) VME interface.

The board is compatible with the A24-D16, A32-D32 and A32-D64 modes. It supports the h08, h09, h0B, h0C, h0D, h0F, h39, h3B, h3D and h3F ADDRESS MODIFIERS, and therefore deals with the accesses in block mode. The sub-addresses are coded over the bits 08 to 15. The A32-D64 mode (MBLT) can be used only for reading.

The base address is given by: $\text{switch_address} \times \text{h10000}$ ($0 < \text{switch_address} < \text{hFF}$ for A24-D16 and $0 < \text{switch_address} < \text{hFFFF}$ for A32-D32)

The offset is given by: $\text{sub_address} \times \text{h100}$ (the sub-address list is given in IV.2.d)

The complete address is given by: $\text{base_address} + \text{offset}$

The VME interrupt (IRQ) is used to signal to the acquisition system the presence of data waiting in the RAM. A block of micro-switches is implemented at the back of the board in order to select on which IRQ line (1 to 7) the interrupt will be sent. It must be released by any writing at the address of the INTERRUPT register, which sets it back to 0. It is anyhow also reset by the START_ACQ command.

The sending of IRQ can be inhibited by the positioning at 1 of the INH_IRQ bit (bit 1 of the CONTROL_REG register).

The presence of waiting data can be equally detected without treating the interruption, but by scanning the presence of a 1 in the same INTERRUPT register. However, it should be avoided because it is a source of noise during the data acquisition.

The reading of the data stored in the RAM is executed by realizing N successive readings at the address of RAM_DATA or by realizing series of readings in block mode at this same address (blocks of 128 16-bit words or 64 32-bit words or 256 64-bit words maximum to comply with the VME standard).

IV.2.b) GPIB Interface.

The MATACQ14 boards can have an address set between 0 and 29 (decimal).

- Writing

The GPIB commands are carried out by writing a string of bytes in the board situated at the address designated by the rotary switches.

The content of the first byte always corresponds to the sub-address of the order to be executed or of the register to be addressed.

The content of the following bytes correspond to the data. The number of data bytes is free except in the case of a writing to the sub-address hFF which is a read demand (see below). Even in the case of a command, one data byte must always be sent (its value will be ignored in that case).

- Reading

A method of reading by block was implemented to accelerate the reading by GPIB. The reading of an element is thus executed in the following way:

* Writing operation of the 4 bytes (#FF)(#LSB)(#MSB)(#REG) with

- (#FF): byte with value hFF
- (#LSB): byte with value corresponding to the 8 lowest significant bits of the number of bytes to read (nbyte).
- (#MSB): byte with value corresponding to the 8 most significant bits of the number of bytes to read.
- (#REG): byte with value corresponding to the sub-address of the register to read (h0C to read the data stored in the RAM for instance).

* The board then switches to the GPIB “talker” mode and sends nbyte bytes read at the sub-address #REG.

In the general case (outside DATA RAM) nbyte =1.

In GPIB, the 16 bits of data converted by the ADC are read in two consecutive bytes in the order MSByte, LSByte.

- Interruption

At the end of the emptying of the data in the RAM, the MATACQ14 board generates a « Service Request (SRQ) » on the GPIB bus. The board is not compatible with the PARALLEL or SERIAL POLLING protocols. However the GPIB controller can identify the SRQ emitter by sequentially scanning the INTERRUPT registers of the different boards. It is not a source of noise because the acquisition is then already terminated.

Like in VME, the interruption (SRQ) is set back to 0 by any writing at the address of the INTERRUPT register, or by the START_ACQ command. In the same way, the presence of waiting data can equally be detected without treating the interruption, but by scanning the presence of a 1 in the same INTERRUPT register.

- Broadcast Mode.

A writing at the address 30 (decimal) permits realization of a simultaneous writing in all the MATACQ14 boards present on the GPIB bus.

IV.2.c) USB Interface.

The MATAcq14 boards are equipped with an USB interface based on the FT245B chip from FTDI. The latter permits accessing the board in USB 2.0 full speed (12Mb/s). A specific data transfer protocol has been developed. It includes the notions of sub-address and interrupt and thus permits using all the board functions as described in this document. The corresponding drivers are available for C language or LabView developments on the matacq.free.fr web site.

IV.3. Dealing with the memories.

IV.3.a) Reading of the data in the RAM; mapping.

During the reading of the MATAcq chips, data is digitized by the 12-bit ADC then transferred in the RAM. The sequence order is always the same : one starts by reading the first cell (upper left-hand) of the matrix, and one finishes with the last one (lower right-hand), this independently of the position of the trigger and of the stopping point of the acquisition.

One will therefore have to realign the data in relation to the trigger, which was explained in II.4.b). The channels are treated in parallel, and can be masked individually during the writing in RAM. This implicates that, in the case where NCH channels are validated by the mask (default value = h0F), the data are organized in 16-bit words by groups of NCH addresses corresponding to the NCH channels (**in the order 3 to 0, minus the masked channels**). The table below clarifies the arrangement of the words in the RAM (10252 words maximum).

The data in the table marked with an asterisk (*) are reserved for expert usage.

RAM internal address (HEX)	Type of data
0000 to NCH-1	First sample (*)
NCH to 2*(NCH)-1	Vernier
2*NCH to 3*(NCH)-1	Reset baseline (*)
3*NCH to 4*(NCH)-1	1st cell
4*NCH to 5*(NCH)-1	2 nd cell
5*NCH to 6*(NCH)-1	3 rd cell
...	...
2562*NCH to 2563*(NCH)-1	2559th cell
2563*NCH to 2564*(NCH)-1	2560th cell (last cell)

If the number of columns to read (register NB OF COLS TO READ) chosen is less than 128 (default value), the transfer in RAM will stop as soon as this number has been reached. In such a case, one must be sure that the useful data is located in the first part of the matrix. This is the role of the SYNC_OUT output which signals the passage into the beginning of the matrix. In order to validate it, the ESO bit must be placed at 1 in the control register (see 0), and one must displace the corresponding strap (S4).

The channel mask register furthermore permits validation of only the utilized channels, which will also permit reduction of the volume of data stored in the RAM. In this case indeed, only the data of the valid channels will be recopied in the RAM, all the while respecting the same storage order of the data.

The access to reading in the RAM is done by secondary addressing. Its internal address is indeed controlled by a 16-bit counter (RAM_INT_ADD) located in the controller placed on the board in the FPGA. This is not to be managed by the external interfaces, the acquisition sequencer generating its own address starting from zero for the writing in the RAM. This counter gets auto-incremented in the course of the addressing. It is systematically reset at zero at the end of the writing cycle, which permits not having to load it when one wants to read all of the memory. However, one can directly have access to an address or a group of addresses given in the RAM by pre-loading it.

Seen from the bus, the reading in the RAM is therefore always done at the same h0C (in GPIB and USB) or h0D (in VME) address.

In GPIB and USB, the 16 bits of data converted by the ADC and stored in the RAM (accessible by reading of 2 bytes at the 0C address) are read in order MSByte, LSByte. Only the 14 LSbits of the data issued from a conversion of the ADC have a significance : the bits from 0 to 13 correspond to the 14 encoded bits. The 2 MSbits are fixed at 0 on the board, and they can be masked during the reading.

IV.3.b) Accessing the EEPROM.

This version of the board comprises an EEPROM in order to store data useful for the user, for instance calibration data specific to the board. This EEPROM is a Flash memory AT29LV010A with a depth of 128kbytes. It is shared on the board within two 64-kbyte halves which can be selected thanks to the bit 2 of the TRIGGER_TYPE register (trigger edge). Its main specificity is to require for its writing accesses full pages of 128 bytes, without which data would be lost. Moreover, it contains a software protection filter which requires the use of three keywords before the beginning of each 128-byte page. The loading procedure will thus be the following :

- Load the memory address registers RAM_INT_ADD (at the sub-address 0x0E and 0x0F) with the start address of the first page to download (**the bits 0 to 6 must thus be equal to 0**). This operation resets the hardware part of the software protection filter for the next page (part located in the ALTERA).
- Write at the sub-address 0x2C the 128 data bytes, **always preceded** by the three following bytes : 0xAA, 0x55, 0xA0 in the same block (there will thus be 131 grouped bytes). Indeed, if two bytes are separated by more than 150µs, the internal loading procedure will be launched.
- Perform a loop reading of the sub-address 0x2D (« data polling ») in order to follow the evolution of the memory internal loading procedure. As long as the latter is not over, the main significant bit (bit 7) will weight the opposite of his last value and the bit 6 will toggle upon every reading. This reading is necessary at least once in order to reset the hardware part of the software protection filter for the next page.
- If the following page is contiguous to the former, send directly the new 131-byte block like described above. Otherwise, first load the address of the new page like precedently.

For the memory reading, there is no notion of page or of protection and the procedure is simply the following :

- Load the memory address registers RAM_INT_ADD with the address of the first byte to read.
- Read the required number of bytes at the sub-address 0x2E.

IV.4. List of the sub-addresses.

The table of the sub-addresses corresponding to the different commands is presented below. A certain number among them are reserved for expert usage. They are indicated by the word « RESERVED » in the « NAME » column. They will not be described in this document and **they should not be used**. In VME, the sub-addresses are coded over the bits A8 to A15, the bits A1 to A7 being unused. For more specific details about the addressing in VME, USB or GPIB, refer to IV.2.

The sub-addresses and the new functionalities of this board have been chosen in such a way to ensure its ascending compatibility with the series of 12-bit dynamic range MATAcq boards. It is thus directly compatible with the latter at power-up: it can then be driven by default by the same software.

The default values of the registers at power-up allow the board to function “normally” and thus simplify writing the software.

Subadd (HEX)	ACCESS	REG or COM.	NAME	bits of data	Default @ power on
00*	W/R	Reg	INTERRUPT	1	0
01*	W/R	Reg	FP_FREQUENCY	6	1
02*	R	Reg	FPGA_VERSION	8	-
03*	W/R	Reg	MODE_REGISTER	2	0
08	W	Com	RESET_BOARD	NO	-
09	W	Com	LOAD_TRIGGER_THRESHOLD_DAC	NO	-
0A**	W	Reg	TRIGGER_THRESHOLD_DAC ALL CHANNELS TOGETHER (LSB->GPIB or USB, word->VME)	8 or 12	0
0B**	W	Reg	TRIGGER_THRESHOLD_DAC_MSB (half byte->GPIB or USB)	4	0
0C**	R	Reg	RAM_DATA_MSB + LSB -> GPIB or USB	8	-
0D**	R	Reg	RAM_DATA ->VME	16	-
0E	W/R	Reg	RAM_INT_ADD_LSB	8	0
0F	W/R	Reg	RAM_INT_ADD_MSB	8	0
10	W/R	Reg	MAT_CTRL_REGISTER_LSB	8	0
11	W/R	Reg	MAT_CTRL_REGISTER_MSB	8	0
12	W	Com	RESERVED	NO	-
13	W	Com	RESERVED	NO	-
14	W	Com	RESERVED	NO	-
15	W	Com	RESERVED	NO	-
16	W	Com	RESERVED	NO	-
17	W	Com	START_ACQUISITION	NO	-
1C	W	Com	SOFTWARE_TRIGGER	NO	-
18	W/R	Reg	PRETRIG_LSB	8	0
19	W/R	Reg	PRETRIG_MSB	8	40
1A	W/R	Reg	POSTTRIG_LSB	8	64
1B	W/R	Reg	POSTTRIG_MSB	8	0
1D	W/R	Reg	TRIGGER_TYPE	8	0
1E	W/R	Reg	TRIGGER_CHANNEL_SOURCE	4	0
20	R	Reg	TRIG_REC	8	-
21	W/R	Reg	FAST_READ_MODES	2	0
22	W/R	Reg	NB_OF_COLS_TO_READ	7	128

23	W/R	Reg	CHANNEL MASKS	4	h0F
24	W/R	Reg	RESERVED	8	64
26	R	Reg	Valp_cp REGISTER	5	
27	R	Reg	Vali_cp REGISTER	5	
28	W/R	Reg	TRIGGER THRESHOLD DAC ch0 (LSB->GPIB or USB, word->VME)	8 or 16	2048
29	W/R	Reg	TRIGGER THRESHOLD DAC ch1 (LSB->GPIB or USB, word->VME)	8 or 16	2048
2A	W/R	Reg	TRIGGER THRESHOLD DAC ch2 (LSB->GPIB or USB, word->VME)	8 or 16	2048
2B	W/R	Reg	TRIGGER THRESHOLD DAC ch3 (LSB->GPIB or USB, word->VME)	8 or 16	2048
2C	W	Mem	User EEPROM (128kBytes***): Write access	8	
2D	R	Mem	User EEPROM (128kBytes): Poll access	8	
2E	R	Mem	User EEPROM (128kBytes): Read access	8	
30	W/R	Reg	POST STOP LATENCY	8	4
31	W/R	Reg	POST LATENCY PRETRIG	8	1
38	W/R	Reg	RATE_REG	1	0
39	R	Reg	TRIG_COUNT LSB	8	
3A	R	Reg	TRIG_COUNT MSB	8	
3B	R	Reg	TRIG_RATE LSB	8	
3C	R	Reg	TRIG_RATE MSB	8	
3D	R	Reg	TRIG_COUNT + TRIG_RATE Block access	4x8	
FF*	W	Reg	NB OF BYTES TO READ IN BLOCK MODE (GPIB)	24 (3x8)	1

* also decoded with the sub-address MSB set to 1 in order to ensure the ascending compatibility with the softwares developed for former versions of the MATAcq boards.

** mind the different use in VME and GPIB/USB.

*** 32k-Byte memory on the first prototypes.

The sub-addresses are organized by type. For more detail on their specific use in VME, USB or GPIB, refer to IV.2.

The functions of these different commands and registers are described below:

- **INTERRUPT**: bit 0 of this register memorizes the arrival of the interruption which signals the end of the acquisition phase. The INTERRUPT signal is forwarded towards the acquisition buses, but it can also be read here. It is also here that it must be released and reset at zero by a simple write access. It is anyhow reset by the START_ACQ command. Bit 1 of this register flags a potential overflow of the event-buffer FIFO linked to accesses on the data bus during the data transfer between the MATAcq chips and the RAM. Finding this bit set at 1 after an interruption would make the event non valid.

Bits	Function
0	Val = 0 => end of acquisition interruption not yet sent Val = 1 => end of acquisition interruption already sent
1	Val = 0 => OK Val = 1 => there was an overflow of the event-buffer during the last event transfer. The event is not valid.

- **FP FREQUENCY**: this 6-bit register permits fixing the Fp period. It is initialized at 1.

Bits	Function
0-5	Val = 1 => Fsample = 2GHz.

Val = 2 => Fsample = 1GHz.
Val = 4 => Fsample = 500MHz.
Val = 5 => Fsample = 400MHz.
Val = 10 => Fsample = 200MHz.
Val = 20 => Fsample = 100MHz.
Val = 40 => Fsample = 50MHz.

- **FPGA VERSION** : this 8-bit read-only register permits reading the version number of the FPGA. The 4 MSbits give the type of board and the 4 LSbits the version number of the firmware stored in the PROM. The code corresponding to the MATAQ14 board is F, which gives a root number of hF0 for FPGA VERSION.
- **MODE REGISTER** : 2-bit register. Concerns the VME interrupt and the data readout mode.

Bits	Nom	Default	Function
0	EN_VME_IRQ	0	This bit permits enabling (1) or not (0) the output of the interruption tagging the end of the acquisition towards the VME bus.
1	14BIT_MODE	0	If this bit is set at 0, the board outputs its data over 12 bits in a way compatible with the software versions developed for the former 12-bit MATAQ boards. If set at 1, data is over 14 bits.

- **RESET BOARD** : reset of the board. Restores idle state. Does not modify the values loaded in the different registers.
- **LOAD TRIGGER THRESHOLD DAC** : permits transfer of the pre-loaded value in the register of the DACs towards the analog converter itself.
- **START ACQUISITION** : launches the data acquisition and resets the INTERRUPT register at the sub-address h80. When this is finished, the INTERRUPT signal will be validated, transmitted towards the bus interfaces, and become available at the sub-address h80.
- **SOFTWARE TRIGGER** : permits generation of a trigger coming from a bus interface.
- **TRIGGER THRESHOLD DAC** : common pre-loading register of the DACs. This 12-bit register covers the range from -0.5V (000) to +0.5V (FFF). By USB or GPIB, one has access to the MSBs and LSBs via 2 distinct sub-addresses. The access is necessarily made in the order MSB (0B) then LSB (0A). By VME, the access is made via a single sub-address (0A). After loading of this register, one must transfer the value in the analog converter via the LOAD_TRIGGER THRESHOLD DAC (09) command.
- **RAM DATA** : this is the memory where the data is stored. As above, the access to the data is made differently in GPIB and in VME (see NB OF BYTES TO READ IN BLOCK MODE). The addressing is indirect, the internal address of the RAM being defined by the RAM_INT_ADD counter located in the ALTERA. Data readout thus always makes use of the single 0D address in VME and of the 0E and 0F addresses in GPIB.
- **RAM INT ADD** : this 16-bit counter fixes the internal address of the RAM for the bus access in progress. It is set back to zero by the RESET_BOARD command and by the interruption at the end of the acquisition phase. For a direct access to an address or a given group of addresses, one must pre-load it.
- **MAT CTRL REGISTER** : this is a control register for the acquisition parameters. It covers 11 useful bits. The bits followed by an asterisk are reserved and must be left at zero.

Bits	Name	Default	Function
0	BWL	0	Regulates the bandwidth of the input amplifiers with BWL1 (cf 0)
1	BWL1	0	Regulates the bandwidth of the input amplifiers with BWL (cf 0)
2	EBP	0	At 1, authorizes the bypass of the input signal towards the ADC

3	ELD*	-	Reserved
4	ENVDLL*	0	Reserved
5	EIR*	0	Reserved
6	EPR	0	At 1, forces the permanent supply of the reading amplifiers
7	EPW	0	At 1, forces the permanent supply of the writing amplifiers
8	ESO	0	At 1, authorizes the SYNC_OUT signal to be output from the board (thanks to the corresponding strap S4)
9	ISA	0	At 1, inhibits the START_ACQUISITION command.
10	IRQP	0	At 1, inhibits the automatical RQP before the acquisition.

- **PRETRIG** : this 16-bit register fixes the delay in periods of Fp between the START ACQUISITION and the internal authorization to validate a trigger, whatever the source of the latter. For proper functioning, it must be fixed at a minimum of 5000 for an Fp frequency of 50MHz and at 10000 for a frequency of 100MHz. By default, its value is 10240.
- **POSTTRIG** : this 16-bit register fixes the delay in periods of Fp between the trigger and the stopping of the acquisition. It permits in practice choosing the useful position of the signal in the window of 2560 cells. By default, its value is 64.
- **TRIGGER TYPE** : this 6-bit register fixes the trigger's source and mode. The bits 6 and 7 permit dealing with the situation where a few cards have been interconnected to work together. **Warning**: bit 2 has two different meanings.

Bits	Function
0-1	Val = 0 => SOFTWARE TRIGGER Val = 1 => trigger on discriminator (threshold fixed by the DAC) Val = 2 => external trigger from the TRIG_EXT input Val = 3 => logic "OR" of SOFTWARE TRIGGER and trigger on discriminator
2	Val = 0 => rising edge or selection of the lowest half of user EEPROM Val = 1 => falling edge or selection of the highest half of user EEPROM
3	Val = 0 => Inhibites random internal trigger. Val = 1 => Authorizes random internal trigger.
4	Val = 0 => one uses the Trigger normally. Val = 1 => one uses the external Trigger directly and without masking.
5	Bit = EnValidTrig. Val = 0 => the Trigger directly launches the readout. Val = 1 => the Trigger has to be validated by the EN_EXT_TRIG input in order to launch the readout.
6	Selection of the reset mode of the BUSY signal: Val = 0 => one takes EN_EXT_TRIG into account. Val = 1 => one ignores EN_EXT_TRIG.
7	Permits inhibiting the BUSY signal: Val = 0 => the BUSY signal is performing in a usual way. Val = 1 => the BUSY signal is pulled at zero (inactive).

- **TRIGGER CHANNEL SOURCE** : this 4-bit register fixes the channel(s) from which the discriminators will release the trigger. More than one channel can be validated at the same time because one realizes a logic « OR » of the outputs of the discriminators in the controller.

Bits	Function
0	Val = 0 => Disables Trigger on channel 0. Val = 1 => Enables Trigger on channel 0.

1	Val = 0 => Disables Trigger on channel 1. Val = 1 => Enables Trigger on channel 1.
2	Val = 0 => Disables Trigger on channel 2. Val = 1 => Enables Trigger on channel 2.
3	Val = 0 => Disables Trigger on channel 3. Val = 1 => Enables Trigger on channel 3.

- **TRIG_REC** : this 8-bit register gives the distance between the column where one finds the column pointer at the arrival time of the synchronous trigger and the last column (128). It permits in practice to roughly date the useful signal to the nearest clock rising edge. This dating will be refined with greater precision by the utilization of the vernier.
- **FAST READ MODES** : this 2-bit register permits realization of a faster reading of the MATAcq chips in some specific applications.

Bits	Function
0	Val = 0 => sequence with reading of TRIG_REC (normal) Val = 1 => sequence without reading of TRIG_REC (short)
1	Val = 0 => sequence departing from the first column (normal) Val = 1 => sequence departing from the STOP (possible reduced readout depth)

- **NB OF COLS TO READ** : this 8-bit register gives the number of columns that one wants to read in the matrix. The number of columns can be fixed between 0 et 128. The stored value is by default 128, which corresponds to the whole matrix.
- **CHANNEL MASKS** : each one of the 4 bits in this register individually validates a channel on the board. For this, they must be set at 1. At zero, the corresponding channel is masked and its data will not be recorded in the RAM. Caution : this modifies the format of the frame stored in the RAM (see IV.3).
- **Valp_cp & Vali_cp REGISTERS** : these registers have to be used only for the sampling frequencies lower or equal to 500MHz, when the rotating masks Valp and Vali are used themselves. They permit locating the trigger in this case. They must be read out after TRIG_REC. They give the number of the line where one finds the first mask bit at 1 for each of the two registers (line number between 0 and 19).
- **TRIGGER THRESHOLD DAC Ch#** : individual pre-loading registers of the DACs. These 12-bit registers cover the range from -0.5V (000) to +0.5V (FFF). By USB or GPIB, one has access to the MSBs and LSBs via 2 distinct sub-addresses. The access is necessarily made in the order MSB (0B) then LSB (28 to 2A). By VME, the access is made via a single sub-address (28 to 2A). After loading of these registers, one must transfer the values in the analog converter via the LOAD_TRIGGER THRESHOLD DAC (09) command.
- **User EEPROM access** : see IV.3.b.
- **POST STOP LATENCY** : this register permits the programming with steps of 2.5µs of the time during which the board waits for the validation signal in the mode where the latter is used to launch the readout of the MATAcq chips towards the RAM. The default value is of 10µs whereas the minimum one is of 2.5µs.
- **POST LATENCY PRETRIG** : this register fixes with steps of 2.5µs the time to wait before enabling the trigger again consequently to the absence of the validation signal during the window fixed by POST_STOP_LATENCY. The default value, which is set to be the minimum one, is of 2.5µs.
- **RATE_REG** : this register permits activating or not the counting of the trigger rate.

Bits	Fonction
0	Val = 0 => trigger rate monitor non active Val = 1 => trigger rate monitor active

- **TRIG_COUNT** : this register counts the number of triggers produced in the current trigger conditions defined for the board. It works up to 200MHz, starts upon TRIGA and stops:
 - either upon the reading of any of the two counters,
 - or when any of them saturates.

It is possible to read the four bytes of the two counting registers in block mode at the sub-address 0x3D (equivalent to the order 0x39 to 0x3C) and thus to gain a lot of time in USB for instance.

- **NB OF BYTES TO READ IN BLOCK MODE** : for the readings in block mode by GPIB solely, this 16-bit register permits fixing the number of bytes contained in the block. In order to simplify the accesses by reading to the RAM, one will send as in the reading order 4 bytes of data : the 1st with hFF, the 2nd and the 3rd with respectively the LSBs then the MSBs of the number of bytes to read, and finally the 4th with the sub-address h0C for the RAM. The MSBs then the LSBs will then be sent successively. Do not forget to double the number of data to read in the RAM when passing from the number of words to the number of bytes.

IV.5. Synopsis of the board.

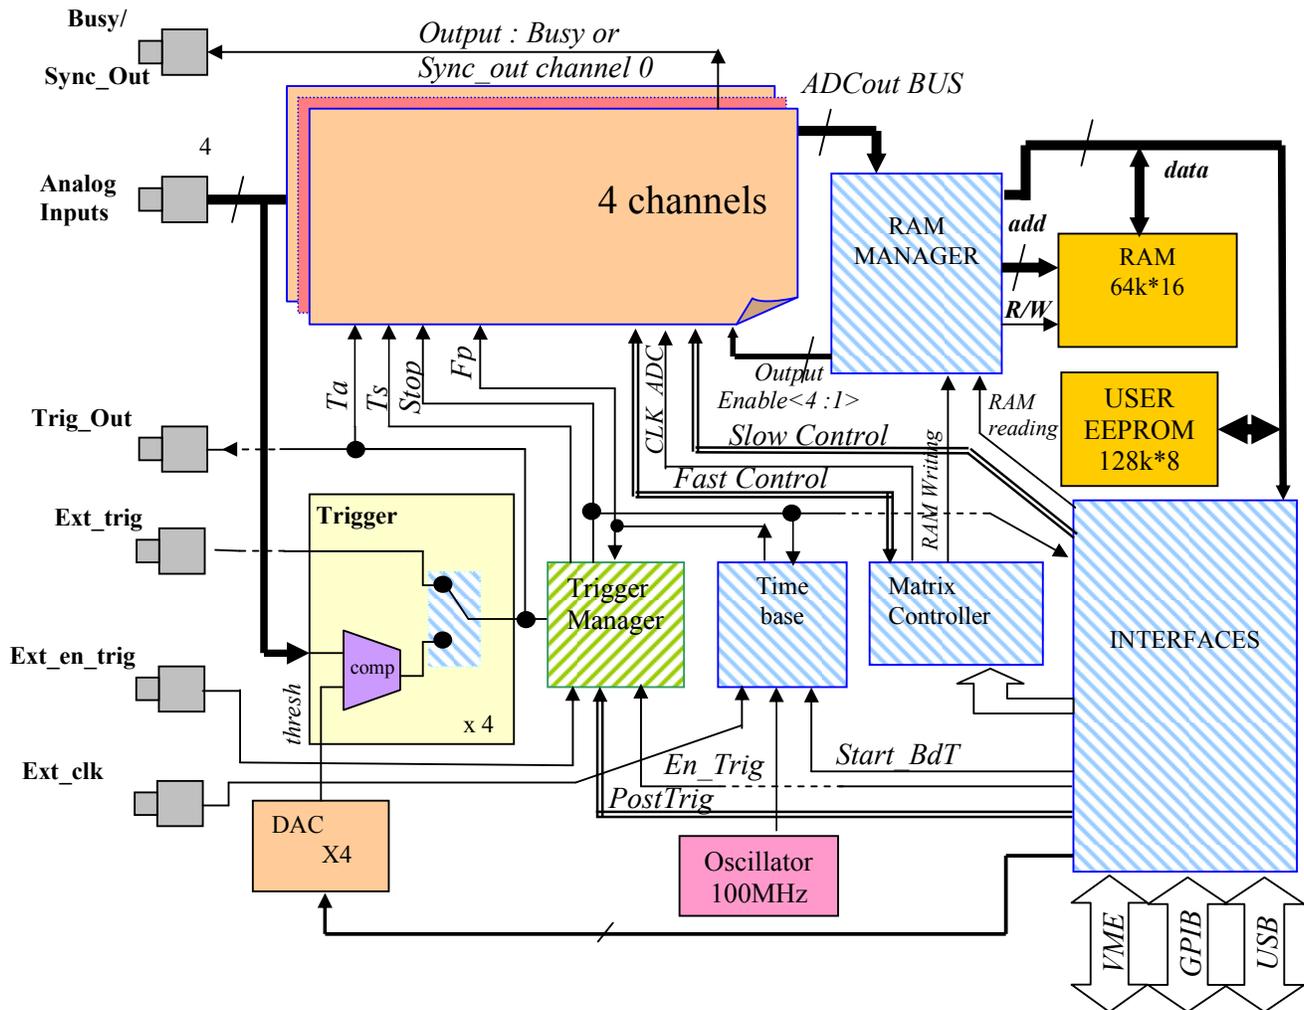


Fig 9 : synopsis of the MATAcq14 board.

The architecture of the MATAcq14 board (Fig 9) is modular. This architecture as well as the components used were selected so as to minimize the costs of conception and production of the board. The board is principally made up of six blocks :

- The 4 channels of acquisition and fast digitization (synopsis of a channel in Fig 10).
- The management of the trigger.
- The management of the clocks.
- The slower readout of the MATAcq chips.
- The management of writing and of re-reading the digital memory (RAM).
- The interfacing with the acquisition system and the management of the user EEPROM.

The trigger management part is integrated in a dedicated CPLD. The last four blocks (except the RAM itself) as well as the digital part of the trigger system are integrated in a single

programmable component (FPGA) with wide possibilities. This considerably reduces the costs of production and may still permit an easy upgrading of the system in the future if necessary.

An E2PROM also permits storing parameters specific to the board from the acquisition software, for instance in the wake of a calibration.

The different logical level translations present on the board are not represented in the synopsis.

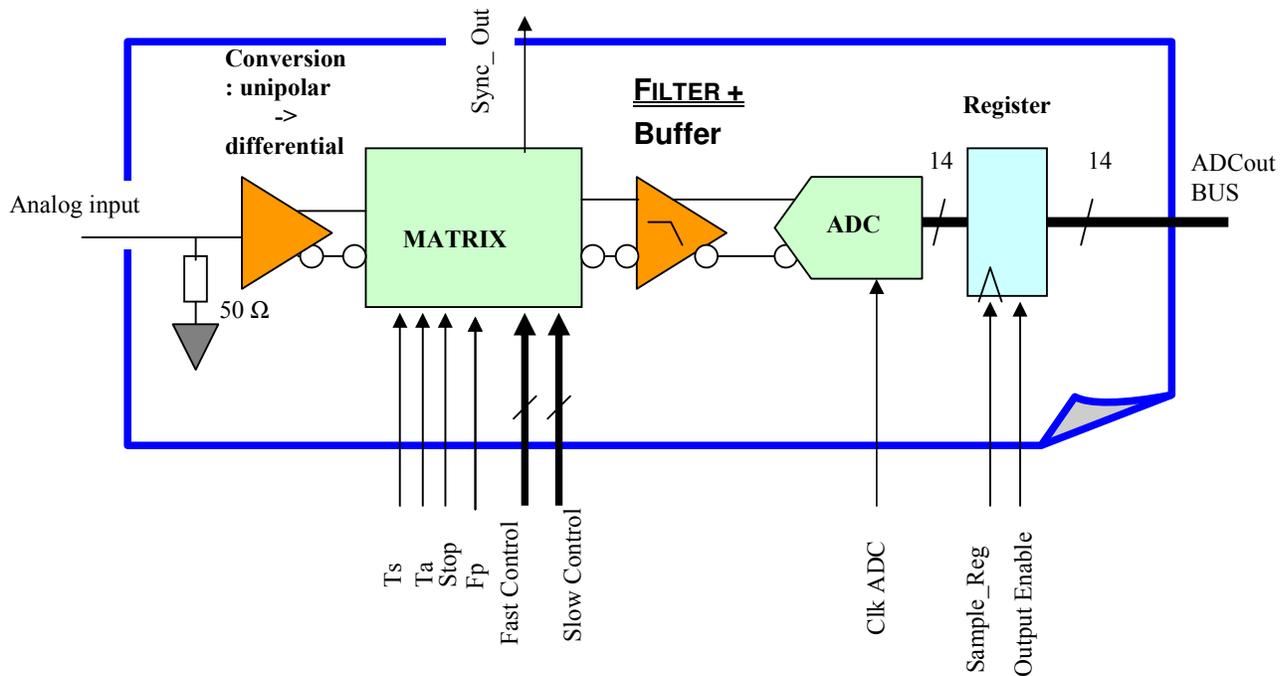


Fig 10 : Synopsis of an acquisition channel on the MATAcq board.

The elementary block of the analog acquisition is represented in Fig 10. It includes :

- The 50-Ohm adaptation of the input.
- A large bandwidth amplifier making it possible to feed the MATAcq chip in differential.
- The MATAcq chip.
- A bandwidth limiter filter.
- The 14bit-5MHz ADC, differential.
- A register allowing the multiplexing of the data coming from the different channels towards the RAM.

IV. SPECIFICATIONS AND PERFORMANCES.

The following table summarizes the principal specifications and performances of the MATAcq14 board.

Input analog signals

Number of channels	4
Input impedance	50 Ohms
Dynamic Range	+/- 1V

Bandwidth	300MHz
Noise/signal ratio	13.5 bits RMS (noise =175 μ V RMS)
Harmonic distorsion	< -60dB for sinusoidal input at 25MHz
LSB (digitization step)	0.125 mV
Integral Non Linearity	< 1 per mil
Differential Non Linearity	< 0.05 per mil
Relative gain between channels	< +/-1%.

Sampling

Max Frequency	2GS/s
Min Frequency	50MS/s
Time precision in a single channel	15ps RMS typical
Time precision between two channels	20ps RMS typical
Depth per channel	2560 points (of which 2520 are usable)

Trigger

Threshold setting dynamic range	+/- 1V
Threshold setting step	0.5mV
Time precision	50ps RMS typical*

Analog to Digital Conversion

Conversion frequency	5MHz
Resolution	14 bits
Time to empty the matrices into the RAM	675 μ s

Acquisition

Acquisition rate (VME)	Up to 800 acquisitions/s over 4 full channels
Acquisition rate (GPIB)	Up to 100 acquisitions/s over 4 full channels
Acquisition rate (USB)	Up to 50 acquisitions/s over 4 full channels

Front Panel Signals (TRIG_OUT, SYNC_OUT, TRIG_EXT)

NIM Standard (negative logics) :

Input Impedance (TRIG_EXT)	50 Ohms
Lower max level (logic 1)	-0.6V
Upper min level (logic 0)	-0.2V

Power Supplies

Min voltage on « +5V »	4.5V
Min voltage on « +12V »	6.5V
Min voltage on « -12V »	-6.5V
Consumption on +5V	1.5A when idle, 3A max (varies with acquisition rate)
Consumption on +12V	typ 350mA
Consumption on -12V	typ 150mA

* includes both sampling and trigger precisions.

V. BIBLIOGRAPHY.

[1] E. Delagnes, D. Breton , **Echantillonneur analogique rapide à grande profondeur mémoire.** French patent n°01 05607 from April 26th 2001. US Patent **6,859,375** from February 22nd 2005: **Fast analog sampler with great memory depth.**